INSTRUCTION MANUAL WDESKVIEW







ADHERES TO

GLASS SELECT METAL AND TILE **ODES NOT ADHERE TO**

BRICK CEMENT DRYWALL
ANY PAINTED OR TEXTURED SURFACE

INSTALLATION





STFP 1 CLEAN

Clean the rubber suction discs and the glass with standard household cleaning agents and micro-fiber towel to ensure there is no dust or debris.

WARNING:

Ensure that the surface selected is (1) smooth, (2) flat, and (3) rated to withstand the forces that will be placed upon it once DeskView is installed.

STFP 2 GRIP:

Grip the brackets with your thumbs on the inside, fingers on the outside, and levers resting against your palm.



TIP:

Ensure that every part of the rubber suction discs contact the surface and that the discs do not overlap any joints or imperfections in the surface.



STEP 3 PRESS:





STEP 4 SECURE:


With your palms, press down the levers, one at a time. You should feel resistance as you engage the suction force.

 
TIP:

The resistance of the negative pressure generated <u>must</u> be clearly felt. The greater the resistance felt on the lever, the better the suction force.



INSTALLATION

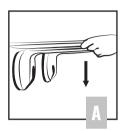



STEP 5 TEST:

Grab the working surface on each side – Pull Down and then Pull Away from the glass to ensure secure suction. Re-test in 5 minutes and then every 12 hours.

If the required suction force has not been achieved, repeat steps 1-4 before using your DeskView.

WARNING.

Changes in temperature and impurities in the surface can weaken the suction force over time. Protect your valuables and take the extra few seconds to test your DeskView's suction force regularly.

ENJOY!

MAX. LOAD: 40 LBS.

MAX. WINDOW TEMPERATURE: 120°F

TESTING NON-GLASS SURFACES

IMPORTANT NOTICE:


DeskView is designed and tested for commercial, high-rise glass. The following testing procedures <u>must</u> be followed before using DeskView on any other surfaces to ensure strong, long-lasting suction force can be maintained.*

STEP A SAFETY:

Using pillows, blankets, or other soft items, create a safety area directly below DeskView (1-6 inches below where DeskView will be tested) to protect DeskView from damage.

HERE'S WHY:

If the non-glass surface allows air into the vacuum chambers, it will weaken the suction force, causing DeskView to fall.

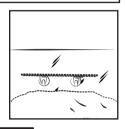

Avoid Seams \$\frac{1}{4} \tag{1-6} \text{ in.}

₹ 5 min

STEP B TEST INSTALLATION:

Following Installation Steps 1-5 on pages 1 - 2, install DeskView on the non-glass surface (avoiding grout and seams) 1-6 inches above the safety area. Test for secure install after 5 minutes and 30 minutes



TIP-

You <u>must</u> re-test after 5 minutes and 30 minutes. The non-glass surface may slowly allow air into the vacuum chambers so DeskView initially appears secure but losse force. Do not place any items on DeskView while testing.

STEP C FINAL INSTALLATION:

If DeskView remains secure on the non-glass surface after 30 minutes, follow Installation Steps 1–5 on pages 1–2 at the desired height.

WARNING:

Ensure the non-glass surface is rated to withstand the weight you will be placing on DeskView. Do not use DeskView on any surface that fails Step B.



*DeskView DOES NOT adhere to drywall, cement, and other textured or painted surfaces.



REMOVAL INSTRUCTIONS

STEP 1

RFMOVF ITFMS:

Remove all items placed on DeskView's working surface.

STEP 2 SLOWLY RELEASE EACH LEVER:

Grip the brackets with your thumbs on the inside, fingers on the outside, and levers resting against your palm. To release the lever, rotate your hand so your palms are facing up with your middle two fingers touching the bottom of the lever. Slowly pull up on the lever with your middle two fingers. Release the lever into your palm to allow for a slow release.

WARNING:

The levers can release at high-speed. Avoid injury and damage to your DeskView by keeping your palms on the lever as you release with your middle two fingers. **DO NOT** place your thumb on the lever at any time.

STEP 3 BREAK SUCTION SEAL:

If DeskView cannot be removed after releasing the levers, then while gripping the brackets as described in Step 2, slide your fingertip between the glass and the rubber suction disc to release the suction force.



MAINTENANCE

- Always keep the rubber suction discs clear of oil, dust, and debris.
- Clean the rubber suction discs with standard household cleaning agents and a micro-fiber towel before every use.
- Check the rubber suction discs for possible deterioration. If rubber suction discs show damage, contact us at contact@shopdeskview.com and replace immediately.*
- DO NOT remove the top surface or try to replace the rubber suction discs or any other components without first receiving proper replacement instructions from us by contacting contact@shop-deskview.com

*Deskview offers FREE REPLACEMENT for damaged rubber suction discs.









https://DeskView.co

COPYRIGHT

Copyright @ Abvious, LLC 2017.

Contents subject to revision without prior notice.

DeskView is a registered trademark of Abvious, LLC (the "Company"). All rights reserved. No part of this manual may be reproduced, transmitted, transcribed, or translated into any language, in any form or by any means, without the prior written consent of the Company.

DISCLAIMER

The Company does not warrant that the product will work properly in all environments and applications, and makes no representations or warranties, either implied or express, with respect to the quality, performance, or fitness for a particular purpose.

The Company shall not be responsible for products found to be defective as a result of misuse, mishandling, or neglect.

Information contained in this manual is subject to change without notice and the Company reserves the right to make improvements to this manual and/or to the products described in this manual, at any time without notice.

If you would like an electronic copy of the most up-to-date manual or if you find information contained in this manual that is inaccurate, misleading, or incomplete, please contact us at contact@shopdeskyiew.com.

THE COMPANY MAKES NO OTHER REPRESENTATIONS OR WARRANTIES OTHER THAN THOSE SPECIFIED IN THIS MANUAL, OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, AND ALL WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICUALR PURPOSE ARE HEREBY DISCLAIMED BY THE COMPANY AND EXCLUDED FROM THE TERMS OF SALE.

Please follow these instructions for the best performance and long life of your DeskView.

