

Using your Uuni 3 Cover/bag

Take Uuni 3 to the beach, camping or a friend's house in bag mode by removing Uuni 3's stack, door and hopper lid. Collapse the legs and lift Uuni 3 into the bag. Place the door, stack and hopper lid on top and you're ready to go!

To protect Uuni 3 from the elements and garden debris in cover mode, place the hopper lid inside Uuni 3 and rotate the door so that the handle is pointing inside the oven. Use the stack sock to protect the chimney and the cover will take care of the oven itself.

Complete your Cover/bag set up by orienting the Uuni logo correctly.

Note: Ensure that your Uuni is completely cool and dry before storing.