

Your BenjiLock By Hampton™ arrives partially charged.

To ensure the best experience, we recommend that you charge your BenjiLock By Hampton™ fully before you begin programming.

Charge your BenjiLock By Hampton™

1. Remove included USB cable from package.
2. Connect the USB cable to the lock (bottom) and to a standard USB input.
3. Note the RED LED on the top of your lock.
4. RED LED will turn off when the unit is fully charged.

Note: A fully depleted battery will take roughly 3 hours to charge.

Program your BenjiLock By Hampton™ (Master User)

Programming note: The first user added will be the owner of the lock and will be needed to add/remove additional users.

1. Wake up the lock: Touch the fingerprint sensor and BLUE LEDS will illuminate around the fingerprint sensor.
2. Insert the key and turn counterclockwise until the BLUE LED fingerprint sensor light appears solid.
3. Press any finger against touch screen until BLUE LED fingerprint sensor light flashes.
4. Press the silver button at the bottom of the lock one time.
5. Wait two seconds until the LED light flashes BLUE at the top of the lock.
6. The LED at the top of the lock will flash once for user 1.
7. Place your finger on the fingerprint sensor until the BLUE LED at the top of the lock turns on and remove your finger after it turns off.
8. Repeat the previous step four more times with the same finger for a total of 5 times. On the fifth time, remove your finger once the BLUE LED light appears solid. The light will then blink multiple times indicating successful programming.
9. Remove the key, and your lock is programmed for one of its users.

Troubleshooting: If the LED at the top of the lock flashes RED, this means your fingerprint has not been recorded. If this happens, simply continue following the steps for programming.

Add additional users to your BenjiLock By Hampton™

1. Wake up the lock: Touch the fingerprint sensor with a finger that is not programmed and the BLUE LED fingerprint sensor light will flash.
2. Insert the key and turn counterclockwise until the BLUE LED fingerprint sensor light appears solid.
3. Authenticate permission to add users by placing the first finger programmed (Master User) on the fingerprint sensor until the LED light on top of the lock turns blue.
4. You now press the silver button at the bottom of the lock 2-10 times to correspond to the user you are programming.

Note: Pressing the silver button 2 times corresponds to user 2, 3 times corresponds to user 3, etc.

5. Repeat steps 5-8 from the programming instructions.
6. The BLUE LED in step 5 will flash and correspond to the number of times you press the silver button.
Note: For users 1-5, the LED light will flash the same number of times the silver button was pressed. For users 6-10, the LED light will appear solid plus one flash for each count over 5; for example, user 6 is 1 long flash plus one short, 7 is 1 long flash plus two short, etc.

To delete a user from your BenjiLock By Hampton™

1. Wake up the lock: Touch the fingerprint sensor with a finger that is not programmed and the BLUE LED fingerprint sensor light will flash.
2. Insert the key and turn counterclockwise until the BLUE LED fingerprint sensor light appears solid.
3. Authenticate permission by the first finger programmed (Master User) on the fingerprint sensor until the LED light turns blue.
4. Press and hold the silver button on the bottom of the lock until the RED LED at the top of the lock flashes.
5. Release button.
6. Press the silver button the number of times for the user you wish to erase.
7. RED LED at the top of the lock will flash. That user's fingerprint is now erased.

To delete all users from your BenjiLock By Hampton™ (Master Reset)

1. Wake up the lock: Touch the fingerprint sensor with a finger that is not programmed and the BLUE LED fingerprint sensor light will flash.
2. Insert the key and turn counterclockwise until the BLUE LED fingerprint sensor light appears solid.
3. Authenticate permission by placing the first finger programmed (Master User) on the fingerprint sensor until the LED light turns blue.
4. Press and hold the silver button on the bottom of the lock until the RED LED at the top of the lock flashes.
5. Release button.
6. Press and hold the silver button on the bottom of the lock again until the RED LED at the top of the lock flashes.
7. BenjiLock By Hampton™ is now reset and all users are erased.

For additional instructions and FAQ's, please visit www.benjiunlock.care

ONE YEAR LIMITED WARRANTY

Visit www.benjiunlock.care or call 833-252-3654 for warranty details.